SCOSCHE® **TA2076B**

IN-DASH INSTALLATION KIT FOR 2007-UP TOYOTA FJ CRUISER

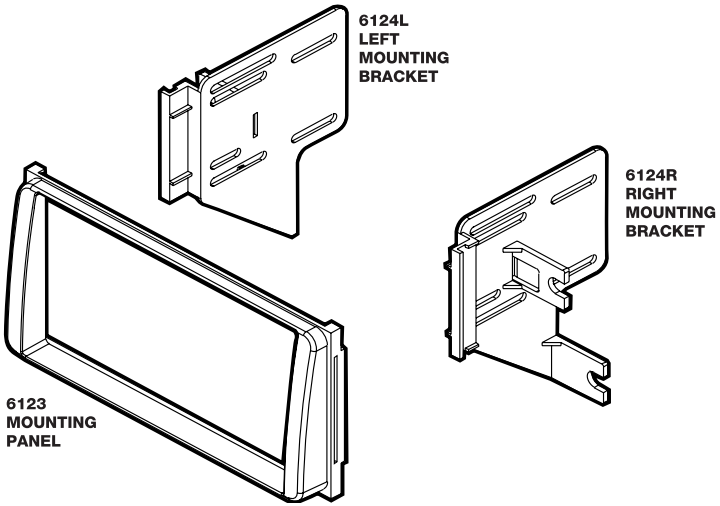

INTRODUCTION/PRELIMINARY

This premium installation kit for 2007 Toyota FJ Cruiser vehicles includes all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA02
1987- UP Toyota

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2076B) in 2007 Toyota FJ Cruiser Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2009 SCOSCHE INDUSTRIES, INC.

SI 3/09 TA2076B (3000003)

VEHICLE DISASSEMBLY

2007-UP TOYOTA FJ CRUISER

Radio Removal:

1. Extract (1) Phillips screw located on each trim bezel that run along the left and right sides of the radio.
2. Extract (1) Phillips screw located on each side of the panel that surrounds the factory radio. Unsnap disconnect and remove.
3. Extract (4) 10mm bolts securing factory radio. Lift away disconnect and remove.

MOUNTING THE STEREO

DOUBLE DIN MOUNT

1. Snap the 6124 L&R brackets to the 6123 kit panel.
2. Align, position, and bolt the aftermarket Double DIN-ISO head unit to the 6124 mounting brackets. Use the hardware supplied with the aftermarket Double DIN-ISO head unit to secure the mounting brackets to the aftermarket radio.

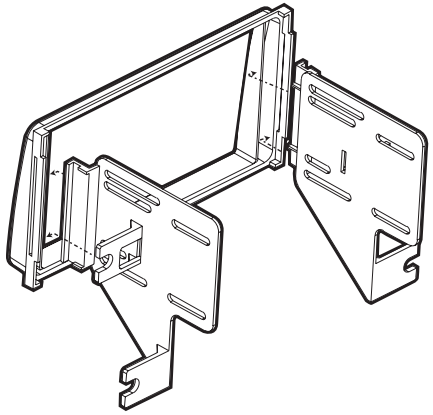

CAUTION:
REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.